


1. BrcstStr2
2. ClockL1Accept
3. Brcst<6>
4. Brcst<7>
5. EvCntRes
6. L1Accept
7. EvCntLStr
8. EvCntHStr
9. BcntRes
10. GND
11. Bcnt<0>
12. Bcnt<1>
13. Bcnt<2>
14. Bcnt<3>
15. Bcnt<4>
16. Bcnt<5>
17. Bcnt<6>
18. Bcnt<7>
19. Bcnt<8>
20. Bcnt<9>
21. Bcnt<10>
22. Bcnt<11>
23. JTAGTMS
24. JTAGTRST_b
25. JTAGTK
26. JTAGTDO
27. SDA
28. JTAGTDI
29. BcntStr
30. Serial_B_Channel
- 31-34. GND
- 35-38. PIN_Preamp_VCC
39. N.C.
40. SLC
- 41-42. GND
- 43-46. TTCrx_VDD
- 47-50. GND



1. f0Select<0>
2. mode
3. inLVDS+
4. inLVDS-
5. gnd
6. externalClock
7. autoRestart
8. externalControl
9. f0Select<3>
10. _reset
11. locked
12. error
13. gnd
14. lvds80MHz-
15. lvds80MHz+
16. gnd
17. f0Select<2>
18. gnd
19. lvds160MHz+
20. lvds160MHz-
21. gnd
22. lvds40MHz-
23. lvds40MHz+
24. f0Select<1>
25. cmos40MHz
26. gnd

- BCNT[0..11]
- BRCST[2..7]
- SUBADDR[0..7]
- DOUT[0..7]
- DQ[0..3]
- BRCST[2..7]
- ON245

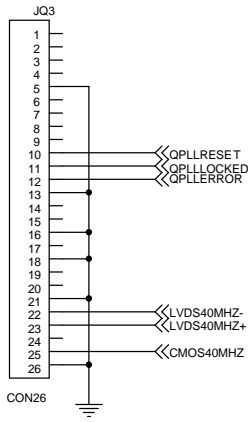